

Motorhome Annual Habitation Service

Underbody

- 1 Body to chassis mountings - check security
- 2 Underbody chassis, tanks & auxiliaries - check
- 3 Spare wheel rack, Corner jacks & step-check operation & lubricate

12v Electrics

- 4 Road lights and reflectors - check condition & operation
- 5 Fridge - check operation
- 6 Interior lighting & equipment - check operation
- 7 Habitation battery - check condition, security & lubricate terminals
- 8 Wiring earth's & fuses - inspect condition
- 9 Awning light & outside pump socket - check condition & operation
- 10 Fan master - test

Ventilation

- 11 Ventilation openings - check for obstructions & free flow of air
- 12 Roof lights, Adjustable Ventilators - check for function

Gas (Fridge not serviced unless requested)

- 13 Gas regulator - check performance
- 14 Carry out gas leak test
- 15 Appliances (water heater, cooker, heating & fridge) - check
- 16 Pipe work - check & replace flexible hose & clips when necessary
- 17 Flame failer device - check operation
- 18 Gas cylinder - check security

Mains System

- 20 Mains inlet plug, cable, earth bonding & RCD operation - check
- 21 Mains outlets & permanent connections - visual & functional check
- 22 Water pump, pressure switch & heater - check operation & filter
- 23 Taps, micro switch, valves, pipes & tank-check cond & operation
- 24 Water filter & housing - check for leaks & replace filter if necessary
- 25 Waste system - check for leaks
- 26 Toilet - check seals, flush & blade operation

Fire Safety

- 27 Diy additions - check operation & safety
- 28 Security & smoke alarms - check operation
- 29 Extinguisher (if fitted) - check correct type & expiry date
- 30 Fire blanket (if fitted) - check location & fixing

Bodywork

- 31 Body panels - check 7 report on any damage & sealant condition
- 32 Body fixtures - check security of ladders, boxes, cycle racks etc
- 33 Floor - check for delamination
- 34 Cab seat - check operation (swivel type or bed configuration only)
- 35 Furniture - check condition & operation (inc hinges & stays)
- 36 Windows seals & blinds - check operation & condition
- 37 Damp test - carry out & note readings on repost sheet
- 38 Stamp service book

Damp test

Guidance Notes

Readings between 0—15% no cause for concern.


Readings between 15—20% require further investigation. Compare with the Motorhomes average reading. Consider asking to recheck the area in three months.

Readings greater than 20% will identify areas needing remedial work.

There may be early signs of water ingress or evidence of moisture.

Again it may be worth considering a recheck after three months. When readings go above 30% then structural damage may be occurring and deterioration is inevitable.

Viewed from Inside

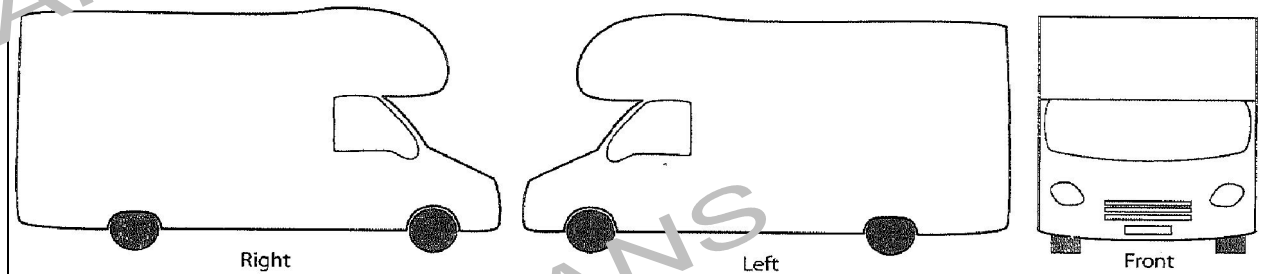

Gas Test Report

	Cooker	Water Heater	Space Heater	Fridge	Regulator
Make					
Model					
Condition					
FFD Operation					
Pipe Work Condition				Gas Hose Condition	
Working Pressure				Test Pressure Drop	

Comments and Recommendations:

.....

.....

.....

.....

.....